


Safety Note – Woody Valley buckles

Some of the light automatic buckles located on the main chest adjustment of some Woody Valley harnesses have experienced an unwanted opening due to the failure of one of the two block/unblock side buttons.



If the buckles shown here above are on your harness, please make sure they aren't faulty simply performing the following procedure:

1. Lock the system by inserting the male buckle into the female buckle and make sure both block/unblock side buttons go back to their original position
2. Unlock the system by pressing both side buttons applying pressure evenly and make sure both block/unblock side buttons go back to their original position
3. Repeat this procedure several times for a definite result.

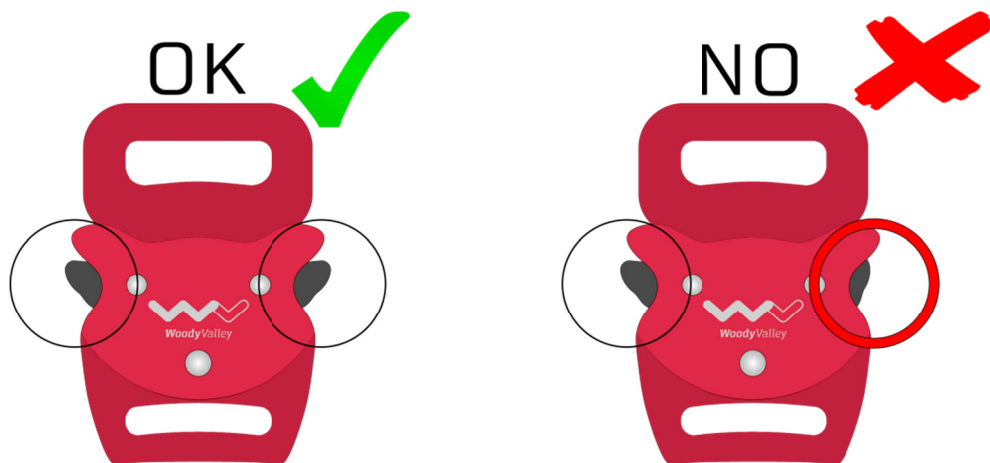

Should you notice one of the two block/unblock side buttons does not go back to its original position, please contact your dealer or the manufacturer to have your buckle/s replaced. Woody Valley will take care of the repair costs.